



Start Of Configuration

---

### Message Terminator

Barcode Value	Barcode Label	Description
		RS-232 message terminator—none
DT17		RS-232 message terminator—EOT



End Of Configuration

---